

DCS (Digital Code) TONE TABLE: 105 codes

No	Dcs Code	No	Dcs Code	No	Dcs Code	No	Dcs Code
01	023	31	165	61	356	91	627
02	025	32	172	62	364	92	631
03	026	33	174	63	365	93	632
04	031	34	205	64	371	94	645
05	032	35	212	65	411	95	654
06	036	36	223	66	412	96	662
07	043	37	225	67	413	97	664
08	047	38	226	68	423	98	703
09	051	39	243	69	431	99	712
10	053	40	244	70	432	100	723
11	054	41	245	71	445	101	731
12	065	42	246	72	446	102	732
13	071	43	251	73	452	103	734
14	072	44	252	74	454	104	743
15	073	45	255	75	455	105	754
16	074	46	261	76	462		
17	114	47	263	77	464		
18	115	48	265	78	465		
19	116	49	266	79	466		
20	122	50	271	80	503		
21	125	51	274	81	506		
22	131	52	306	82	516		
23	132	53	311	83	523		
24	134	54	315	84	526		
25	143	55	325	85	532		
26	145	56	331	86	546		
27	152	57	332	87	565		
28	155	58	343	88	606		
29	156	59	346	89	612		
30	162	60	351	90	624		